


QUICK PROGRAMMING GUIDE FOR RTS MOTORS

Resetting All Pre-Programmed Limit Settings & Channels

LT30 WIREFREE™ ROLL UP MOTORS LT-30 RTS 12V DC

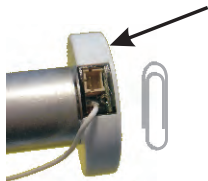

Using a paper clip, press and hold the PROGRAM BUTTON located on the motor head until window covering jogs 3 times, then release button. All transmitters and limits will be erased (motor is now reset to **FACTORY MODE**). Motor limits will need to be reestablished. **Please return back to PROGRAMMING MODE to initiate programming process.**

ST30 Sonesse™ 30 24V DC



Using a paperclip, press and hold the red PROGRAM BUTTON (approximately 15 seconds) until the window covering jogs 3 times. All transmitters and limits will be erased (motor is now reset to **FACTORY MODE**). Motor limits will need to be reestablished. **Please return back to PROGRAMMING MODE to initiate programming process.**

CT32 Cord Lift WireFree™ RTS Motors



(Does not apply to Part #1000494)

Using a paperclip, press and hold the PROGRAM BUTTON, located on the top of the motor casing until window covering jogs 3 times, then release button. All transmitters and limits will be erased (motor is now reset to **FACTORY MODE**.) Motor limits will need to be reestablished. **Please return back to PROGRAMMING MODE to initiate programming process.**

QUICK PROGRAMMING GUIDE FOR RTS MOTORS

Resetting Altus RTS 120 V AC

Perform a Dual Power Cut to delete all previous settings and return motor to **FACTORY MODE**.



Remove plug from power for **2 Seconds**



Plug-in power cord for **10 Seconds**



Remove plug from power for **2 Seconds**



Plug-in power cord.
Window covering will begin to move.

When the window covering stops, press and hold the **PROGRAMMING BUTTON** of any transmitter until the window covering jogs **twice**. Do not release the **PROGRAMMING BUTTON** until the jogging is complete or you will have to start the dual power cut from the beginning.

